

Job or Customer :						
Location:						
Engineer:						
☐ Complies with Spec☐ Alternate	Notes:					
Contractor:						
HeatLink Rep :						
Submitted By :		Date :				
Approved By:		Date :				
P.O. Number :		Date :				

## Description

The TMP 3-Way Mixing Panel's primary application is as a single temperature mixing device where there are no flow requirements in the primary loop. Intended to be used with DHW tanks as a heat source, the pump is activated once every 24 hours, for 15 minutes, to ensure that potable water in the piping is not stagnant. At this time, a DHW priority option for these panels is not available.

When the panel receives a call for heat, the pump is activated, and the thermostatic control head in the 3-way mixing valve will automatically regulate the water temperature in the secondary circuit. When not used with a DHW tank as a heat source, secondary zoning downstream of the panel is possible. The TMP085DP not only allows for higher output, but it is also a 2-zone panel. So even with a DHW heat source, you can now have two radiant floor zones.

#### **Technical Data**


 Standards / Listings CAN/CSA-C22 No.14, UL508 cETLus


Qty	Stk. #	Nominal Panel Output	Nominal Flow	Nominal Pressure Drop Outside of Panel	Valve Size	Valve Cv	Piping Connections	Weight
	TMP085DP	85,000 Btu/hr	2x 4.25 US gpm @ 20 °F ΔT	4 ft	1"	3.9	1" FIP primary 3/4" FIP secondary	26 lb (11.8 kg)




# **Panel Components**

- (1) Zone 1 Pump with Check Valve (UPS 15-58RU Composite)
- (2) Zone 2 Pump with Check Valve (UPS 15-58RU Composite)
- (3) 3-Way Thermostatic Mixing Valve
- (4) PLC with 6' Power Cord
  - 24hr Timer for Potable Applications
  - Bypass Function
  - · Auxiliary Dry Contacts for Heat Source
- (5) 24V(ac) 40Va plug-in transformer
- 6 Thermometer

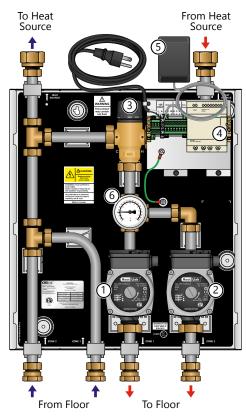

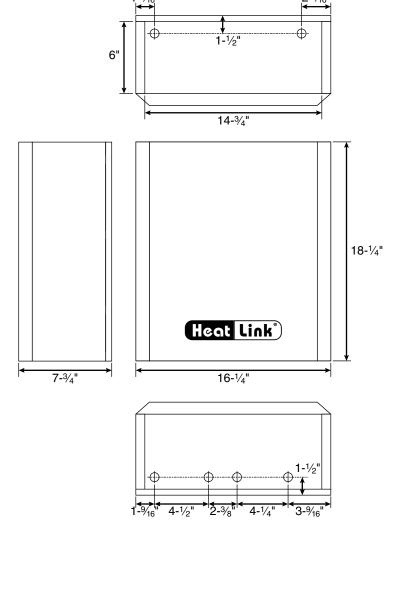

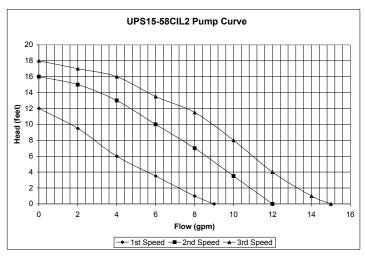

### Installation

Installation must follow all of HeatLink's instructions and guidelines.

#### Maintenance

Maintenance must follow all of HeatLink's instructions and guidelines.

#### **Related Documents**

- TMP085DP Installation, Operation, and Maintenance Manual Instructions (L6TMP000DP)
- Component Warranty