



1 Heat/Cool Thermostat
Standard 6-wire to be run from thermostat to fan coil.



2 Fan Coil End Switch
Standard 2-wire to be run from fan coil to mechanical room.



www.heatlinkgroup.com
1-866-661-5332

Notes:

- Drawings are for HeatLink suggested electrical schematics only! User must determine if electrical schematic will work for their particular application. User must also confirm all HeatLink schematics with manufacturer schematics of each particular control chosen.
- In all cases manufacturer equipment schematics will take precedence over HeatLink electrical schematics.
- Local codes, regulations, and authorities have final jurisdiction.

Application: Rough-in Wiring for One Zone Fan Coil

Date: 2013-05-23

Schematic #: SCH-MRIB-R004

Rough-in wiring see: